


## SHERA FIBRE CEMENT BOARD EXTERNAL CLADDING JOINT FINISHING DETAIL

SHERA EXTERNAL FIBRE CEMENT BOARDS FLUSH JOINT FINISH.

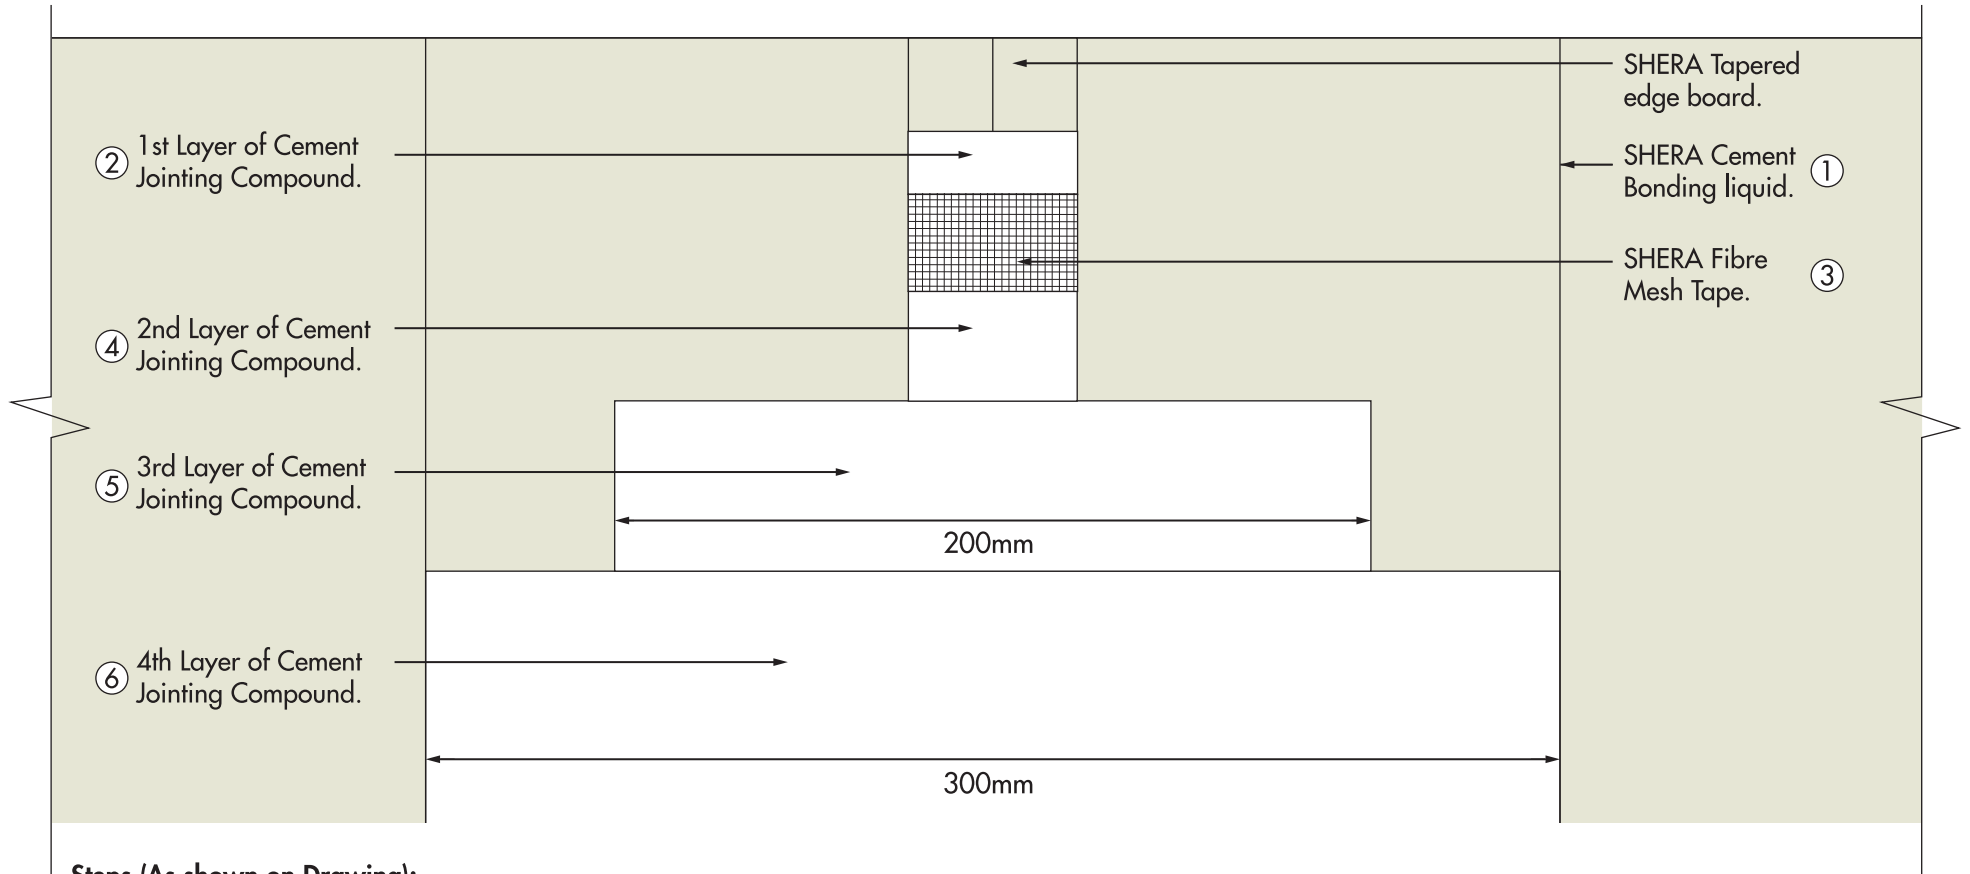

**Steps (As shown on Drawing):**

- ① Apply SHERA cement bonding liquid.
- ② Apply 1st layer of SHERA jointing compound.
- ③ Apply SHERA Fibre mesh tape.
- ④ Apply 2nd layer of SHERA jointing compound and wait until dry (2 Hours) for 3rd Coat.
- ⑤ Apply 3rd layer of SHERA jointing compound and wait until dry (2 Hours) for 4rd Coat.
- ⑥ Apply 4rd layer of SHERA jointing compound and wait until before sanding.